





Trunk Mounting Template

Mounting Instructions:

1. Align with back window or back end of trunk.*
2. Center the template with the middle of the trunk (use car logo or keyhole as a reference) and tape to car.
3. Peel adhesive backing from bottom of ScopeOut.
4. Place ScopeOut in cutout at an angle using either left or right edge as a guide. After properly aligned, press down and apply firm pressure for 30 seconds.
5. Take away template and adjust mirror angle for maximum view.

* Vehicles with a greater sloping trunk should mount ScopeOut mirrors closer to the rear window to increase vision.

Patent
Others Patents Pending
Made in China

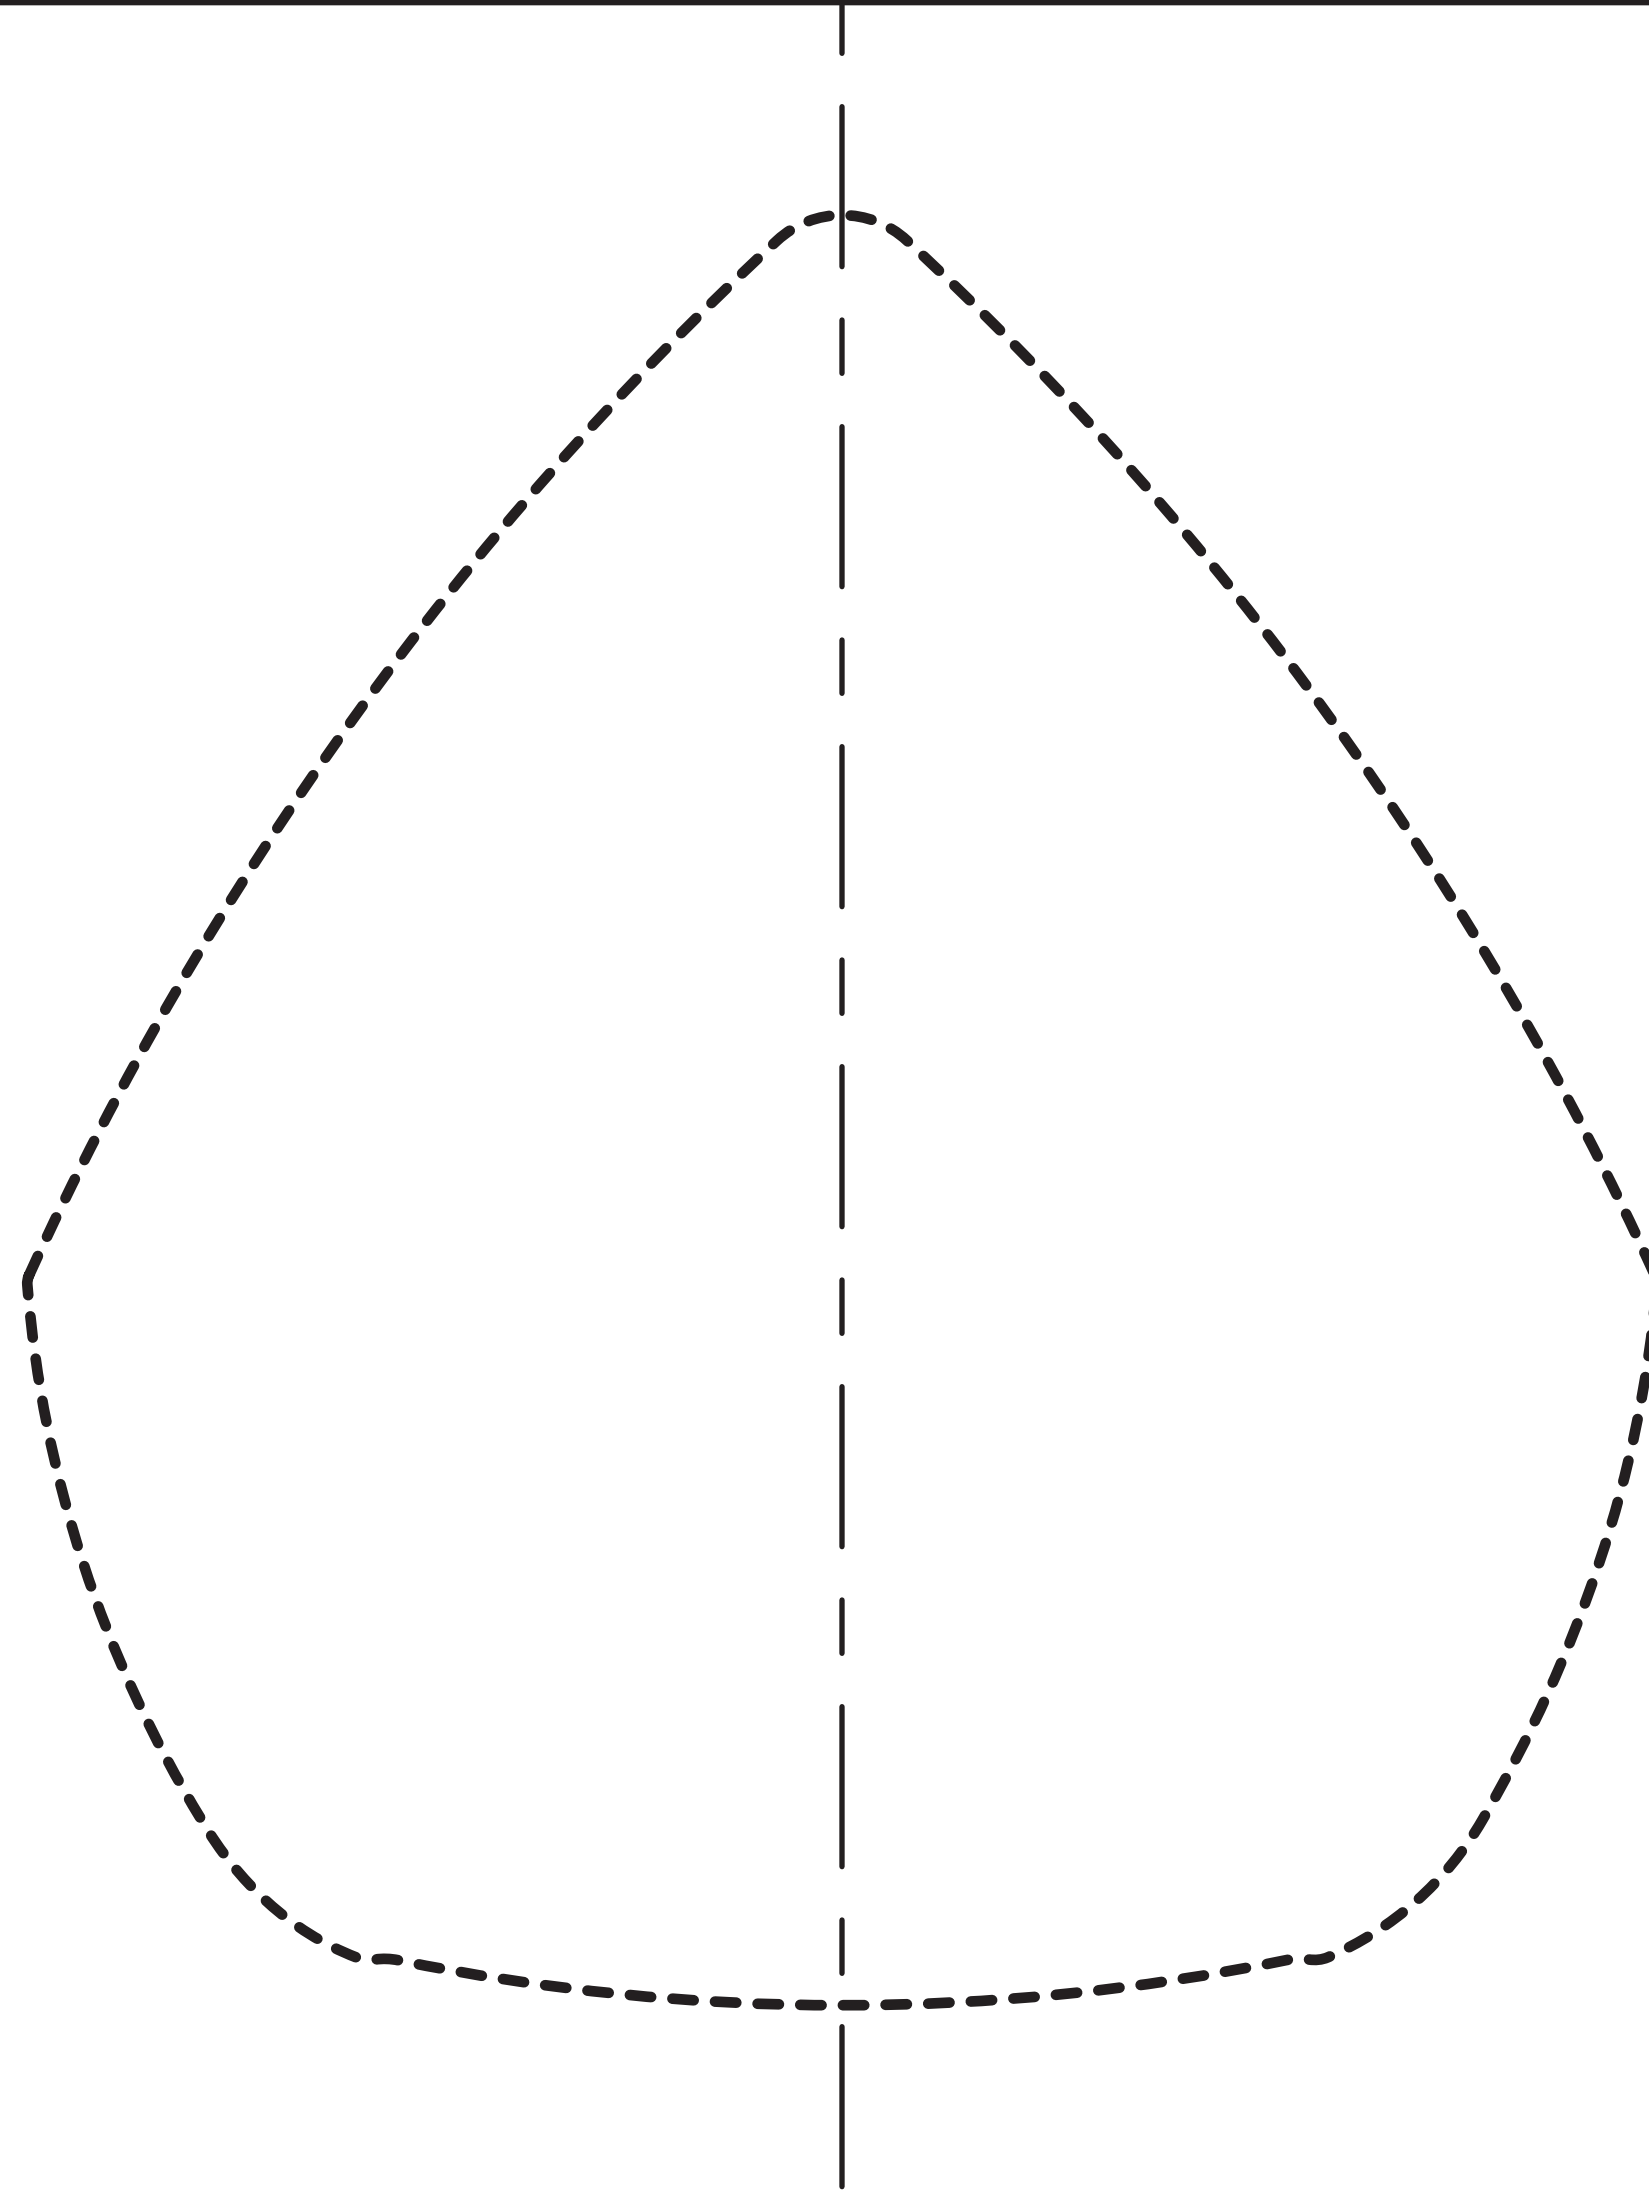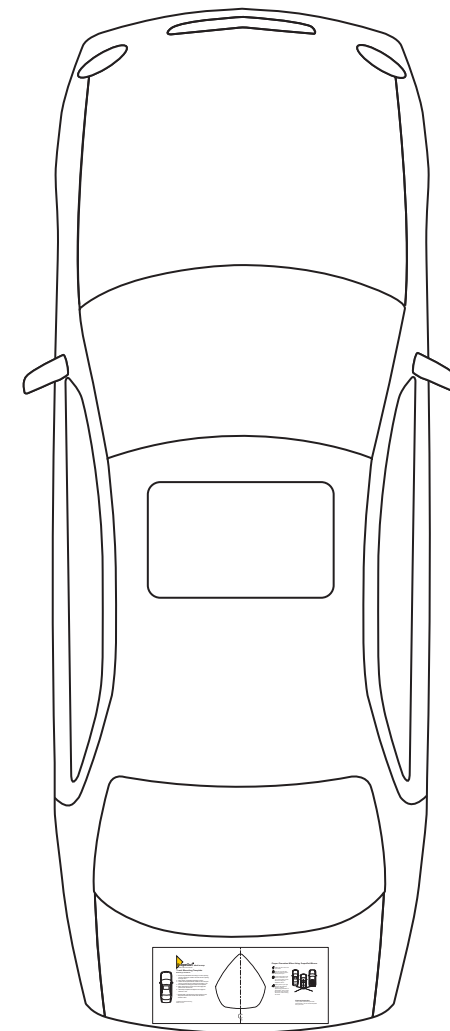


Align with center of trunk



Proper Procedure When Using ScopeOut Mirrors

- 1 Adjust rear view mirror to fit your needs.
- 2 Look into your rear view mirror to check for anyone directly behind you.
- 3 If clear, slowly back out as shown in illustration, until you can see clearly in both directions using your ScopeOut mirrors.
- 4 Again, glance in your right and then left ScopeOut mirrors to look for approaching pedestrians or automobiles. Once you are far enough out to see both directions, continue driving as normal.

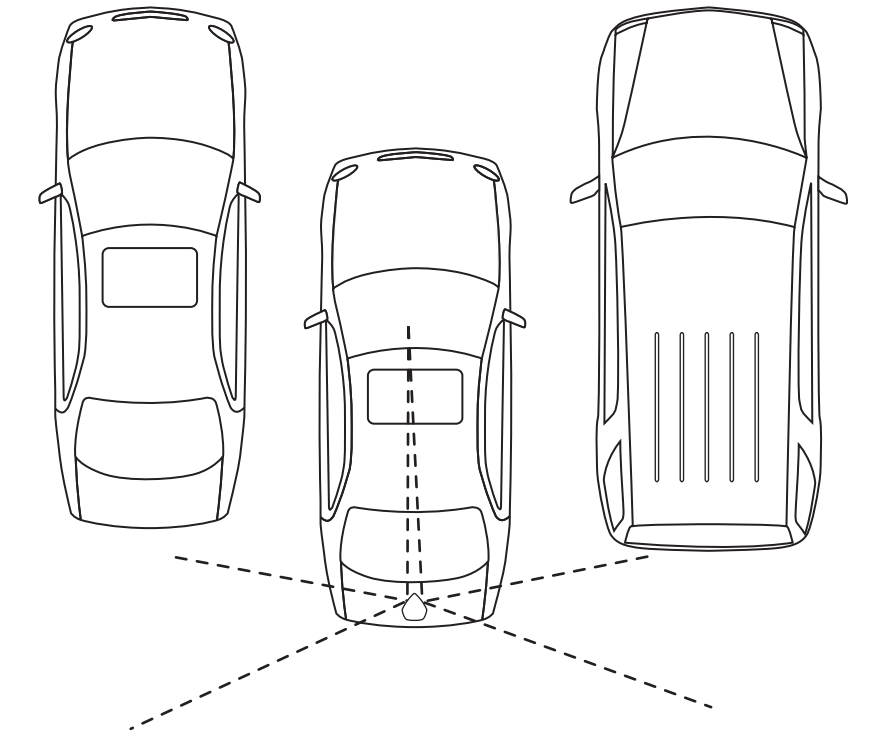

Removal Instruction

Using a plastic spatula and petroleum based product, you can remove ScopeOut from your trunk.